


# VACUUM TOILET

6546819 PRESTIGE SOFT CLOSING, SEAT AND COVER

6549843  
Buffer ( 2 + 4 ) for seat and cover

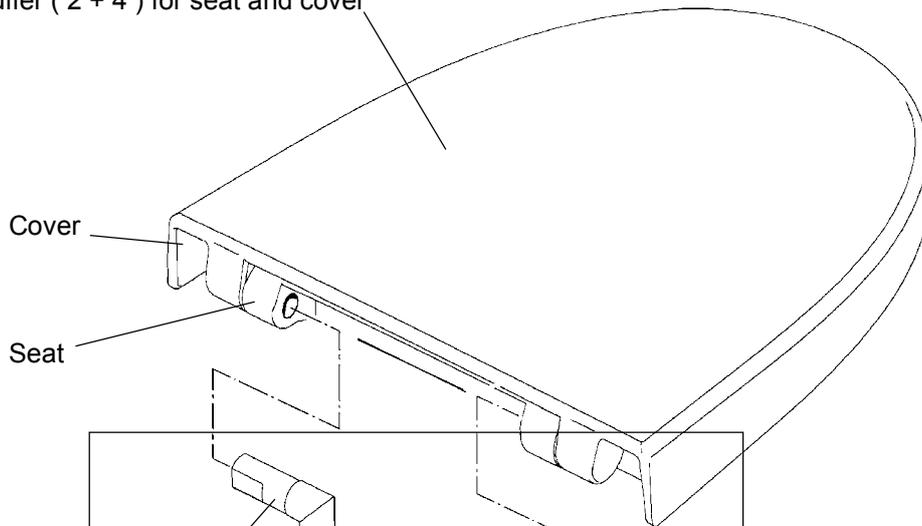

6547813  
Hinge, right

6547812  
Hinge, left

6547811  
HINGE KIT